

Produktnews



Caramatic BasicControl – Fernanzeige für Zweiflaschenanlage Caramatic BasicTwo oder Caramatic SafeDrive PLUS

Was ist die Caramatic BasicControl? Die BasicControl ist eine komfortable Informations- und Steuereinheit zur Überwachung der Betriebs- und Reserveflasche der Zweiflaschenanlage Caramatic BasicTwo in Wohnmobilen und Wohnwagen sowie auf Booten oder der Caramatic SafeDrive PLUS in Wohnmobilen und Wohnwagen.



Wo kann ich die Caramatic BasicControl einsetzen?

Das System passt für die Zweiflaschenanlagen Caramatic SafeDrive PLUS oder Caramatic BasicTwo, Regler-Umschaltautomatiken zum Anschluss an Flüssiggasflaschen. Die BasicControl lässt sich bei bestehenden Anlagen ganz einfach nachrüsten. Das Gehäuse wird auf den Umschaltregler aufgeclipst und der Sensor ins Leitungssystem eingebracht. Abschließend das Kabel mit der Informations- und Steuereinheit verbinden und der Nutzer sieht, ob noch Gas in den Gasflaschen ist bzw. welche der beiden Gasflaschen leer ist.

Was sind die Vorteile?

- Komfortable Überwachung der Gasanlage auf einen Blick – ohne an den Gasflaschenkasten zu müssen
- Immer wissen, ob und wenn ja, welche der beiden Gasflaschen leer ist und gewechselt werden muss
- Einfache und schnelle Nachrüstung bei bestehenden Anlagen
- Anzeige eines Fehlers durch blinkende LED


Caramatic BasicControl – Fernanzeige für Zweiflaschenanlage Caramatic BasicTwo oder Caramatic SafeDrive PLUS

Informations- und Steuereinheit mit Druck- und Reedsensor für die Fernanzeige **71 392 00**

Ersatzteil
Abdeckrahmen, Farbe: anthrazit **71 391 00**

Zubehör
Verlängerungskabel, 10 m **71 392 01**

Zweiflaschenanlage Caramatic SafeDrive PLUS

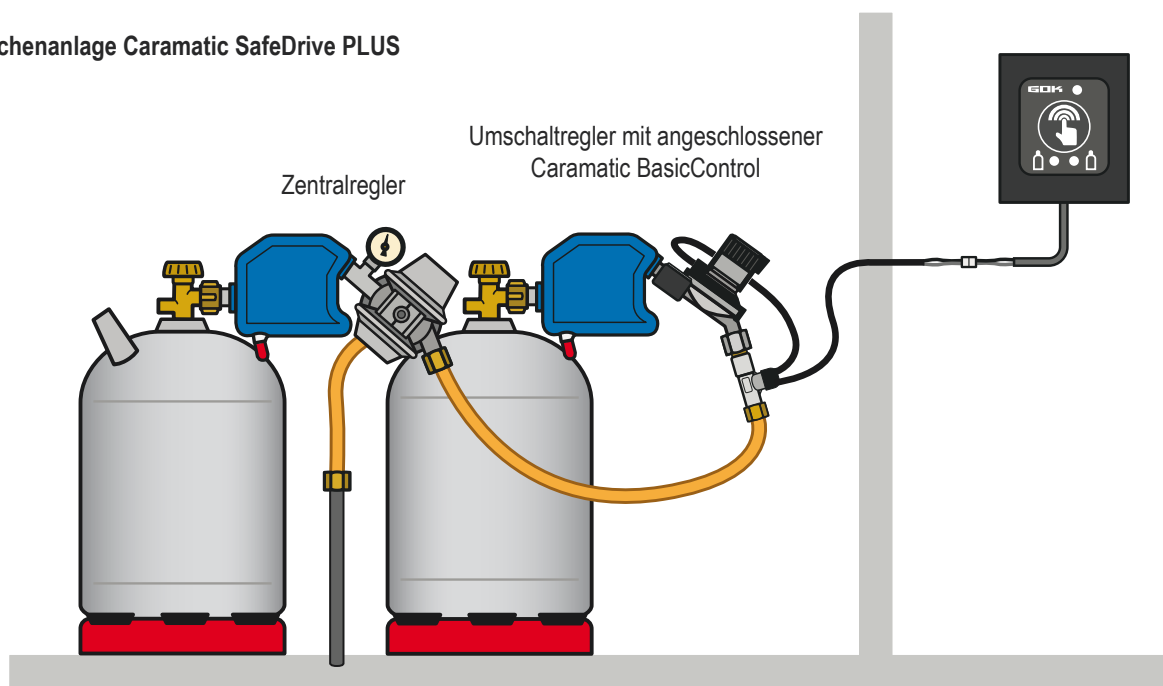



Product news



Caramatic BasicControl – Remote display for Caramatic BasicTwo two-cylinder system or Caramatic SafeDrive PLUS

What is Caramatic BasicControl? BasicControl is a convenient information and control unit for monitoring the operating and reserve cylinders of the two-cylinder system Caramatic BasicTwo for motor caravans, caravans and boats or the Caramatic SafeDrive PLUS for motor caravans and caravans.



Where can I use the Caramatic BasicControl?

The unit is suitable for the two-cylinder systems Caramatic SafeDrive PLUS or Caramatic BasicTwo, automatic changeover regulators to connect to LPG cylinders. BasicControl can be easily retrofitted to existing systems. The housing is clipped onto the changeover regulator and the sensor is inserted into the pipe system. Finally, the cable is connected to the information and control unit and the user can see whether there is still gas in the gas cylinders or which of the two gas cylinders is empty.

What are the benefits?

- Convenient gas system monitoring at a glance – with no need to open the gas cylinder case
- Always know whether and, if so, which of the two gas cylinders is empty and needs to be changed
- Simple and quick retrofitting for existing systems
- Error displayed by flashing LED

Caramatic BasicControl – Remote display for Caramatic BasicTwo two-cylinder system or Caramatic SafeDrive PLUS

Information and control unit with pressure and reed sensor for remote display 71 392 00


Spare part

Cover frame, colour: anthracite 71 391 00

Accessories

Extension cable, 10 m 71 392 01

Caramatic SafeDrive PLUS two-cylinder system

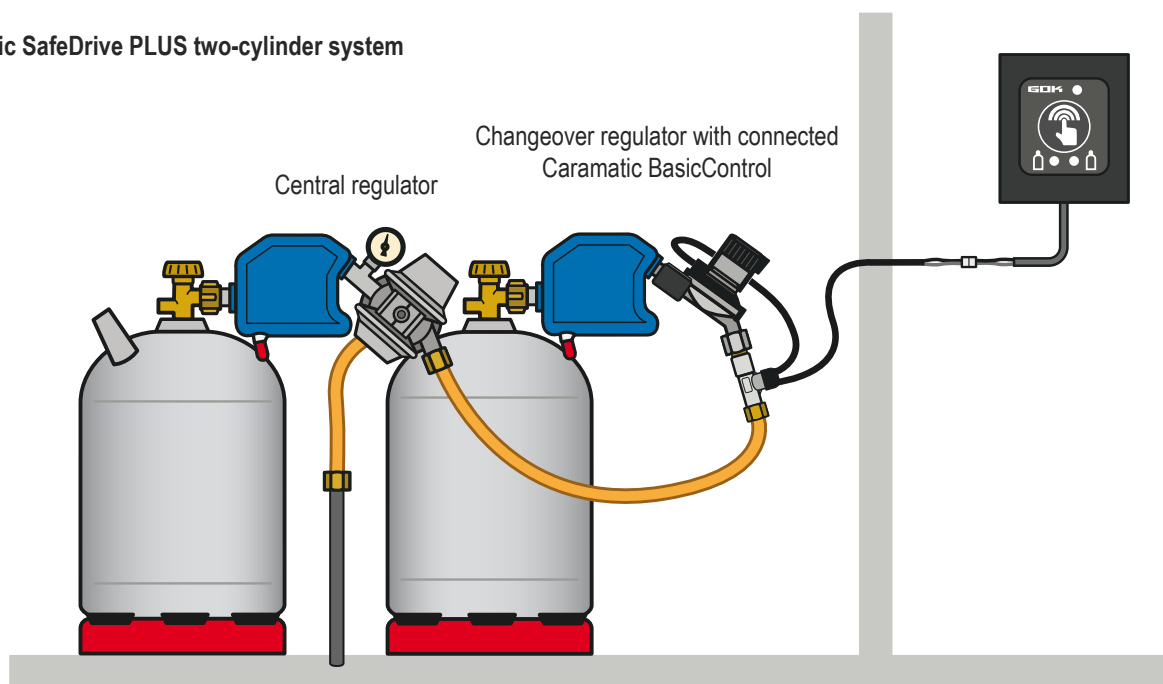

59 024 80 - 02/2024